


TOP VIEW

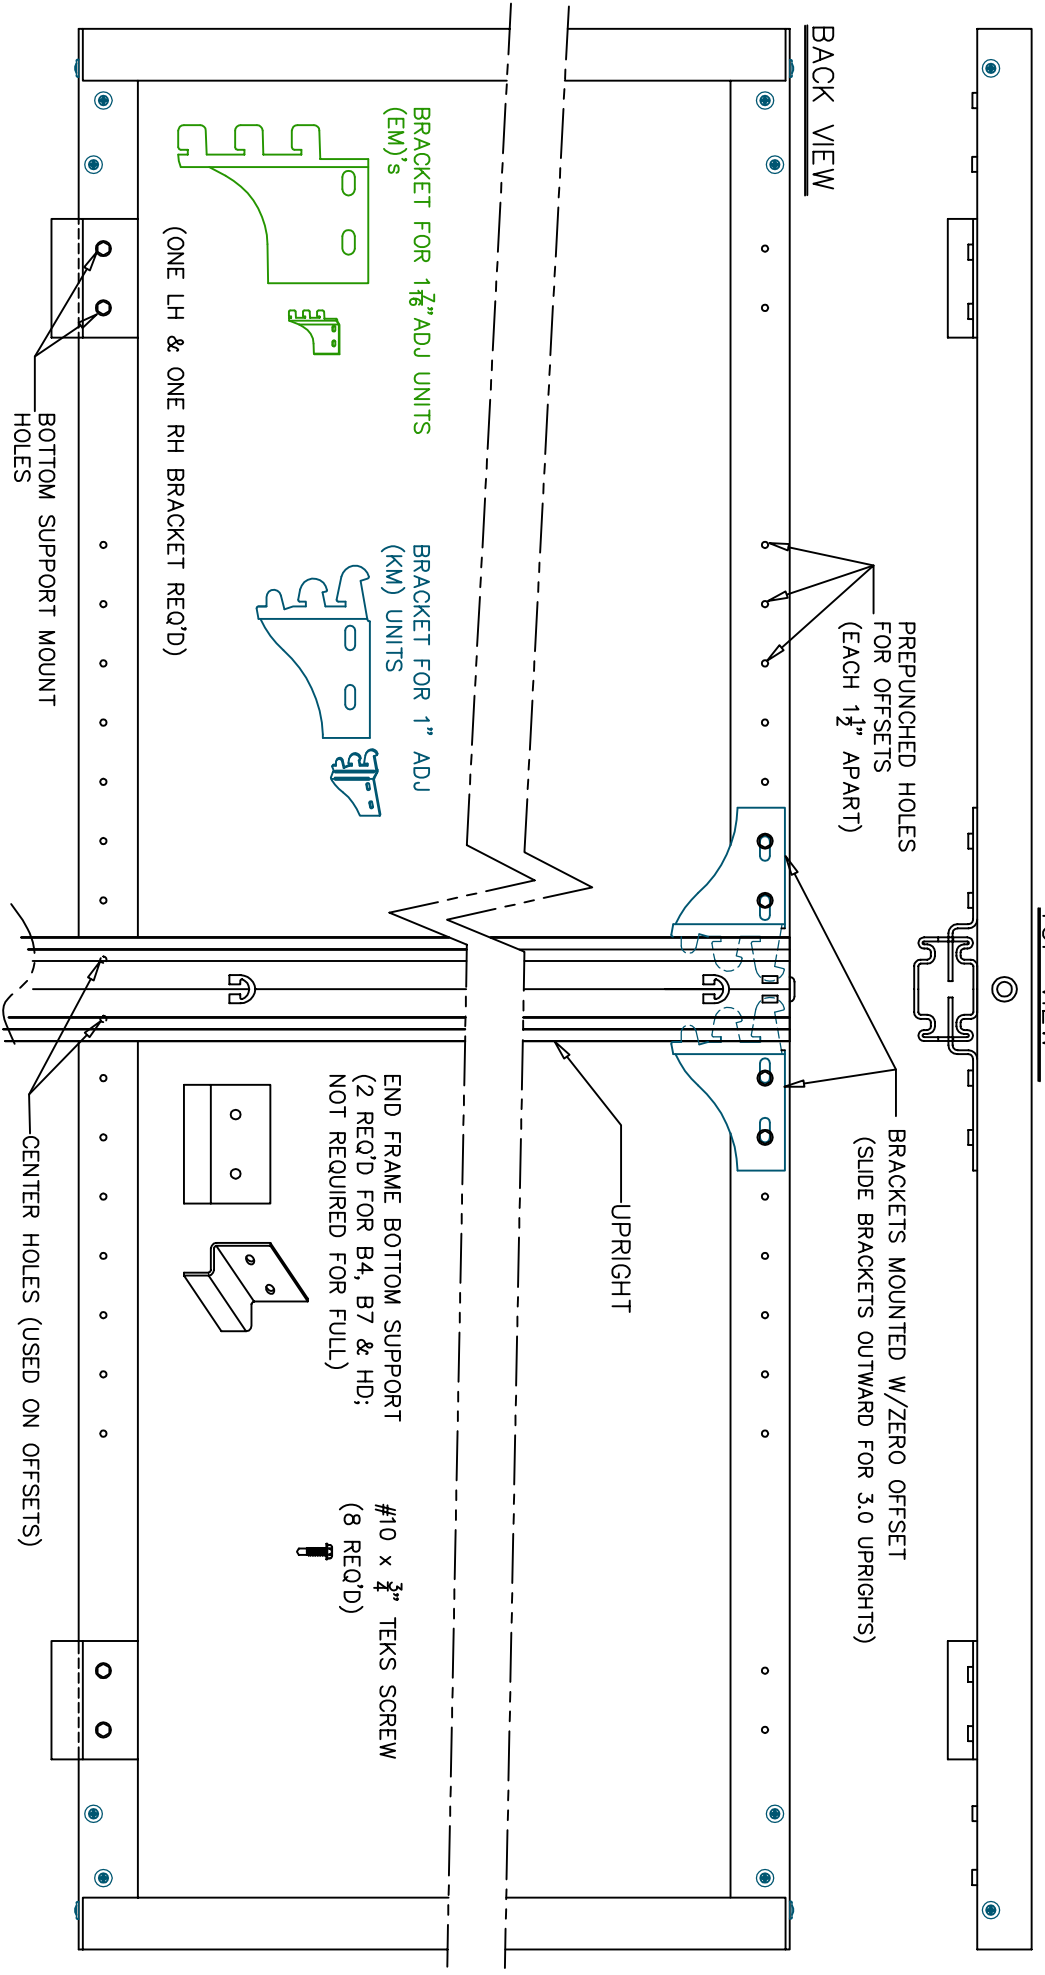

HARDWARE INCLUDED :
 1 PAIR OF BRACKETS (1 L H & 1 RH)
 2 BOTTOM SUPPORTS (NOT REQUIRED ON FULL FRAMES)
 8 TEKS SCREWS (#10x 3/4", SELF DRILLING HEX HEAD)

STEPS TO FOLLOW :

- 1 - ATTACH ONE OF THE BRACKETS TO THE FRAME TOP AT THE DESIRED OFFSET.
- 2 - ATTACH THE BOTTOM SUPPORTS TO THE FRAME, USING THE TWO OUTERMOST MOUNT HOLES
- 3 - MOUNT THE UNIT TO UPRIGHT BY INSERTING THE ATTACHED BRACKET TO THE TOP UPRIGHT SLOTS
- 4 - INSERT THE OPPOSING BRACKET TO THE OTHER SIDE OF THE UPRIGHT AND ATTACH TO THE FRAME TOP

2	1/2 Mar. 2003	KPMB BRACKET MODIFIED	A.M.
1	02-02-92	WASHERS REMOVED	A.M.
#	DATE	MODIFICATIONS	INTL



TITLE: END MERCHANDISING UNIT
 ASSEMBLY INSTRUCTIONS

DATE: DWG. NO. R & D APP.